


Instructions for Use

Insert burs into holder by pressing firmly down into slots. Point the working (sharp) ends toward the built-in guard. Use FG holders for smaller diameter friction grip burs and RA holders for larger diameter rotary attachment burs. Remove burs from holders by pressing down on the working ends and lifting out by the safe ends. Holders can be autoclaved up to 375°F.

Keep these instructions for future reference.

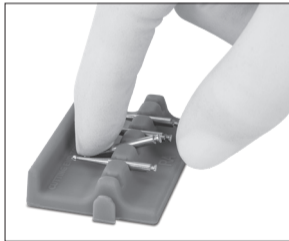

1. To remove bur, press down on the working end.



2. Pick up by the safe end.